


- Onderdelen –
- Spare parts –
- Pièces de rechange –
- Ersatzteile –

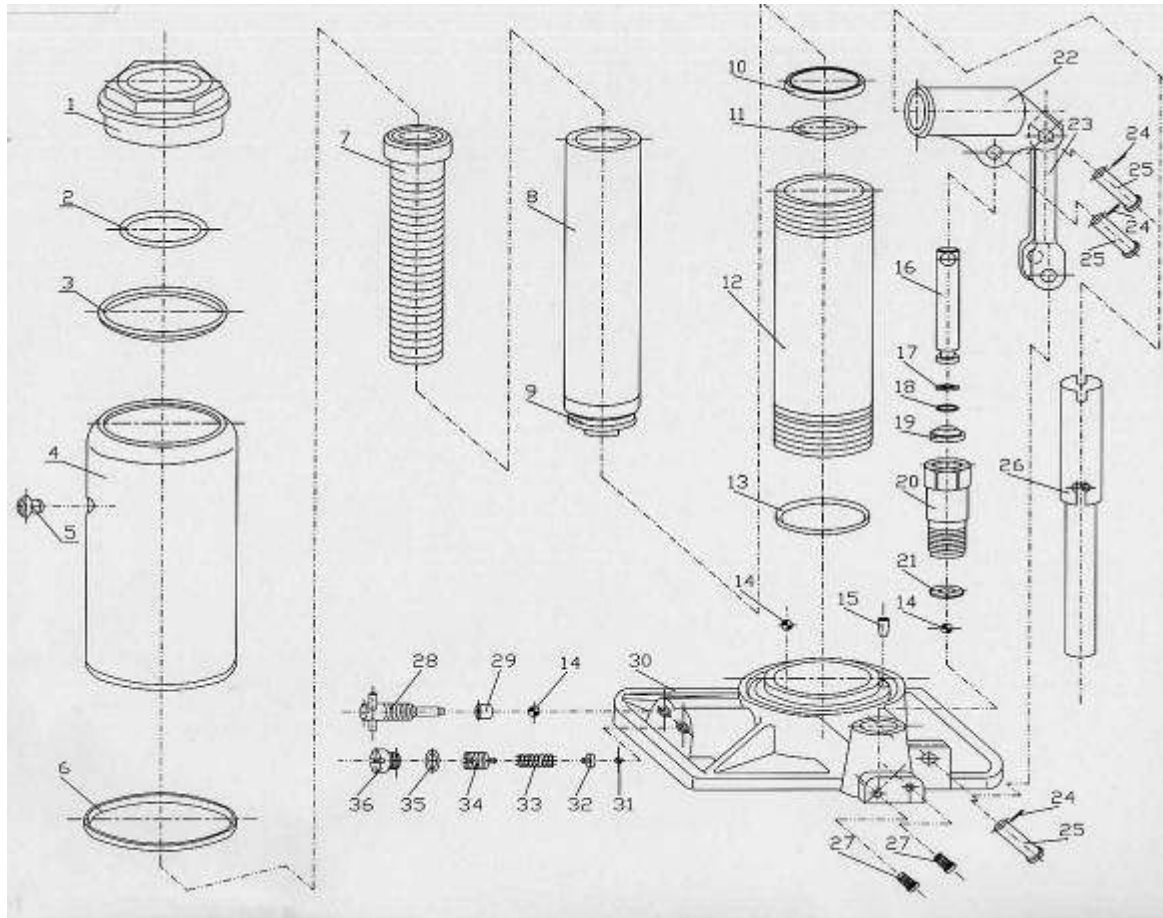

Y411500

Pos.	Art. Number	Description	Pos.	Art. Number	Description
1	Y411500-01	Top Nut	19	Y411500-19	Dust Wiper
2	Y411500-02	O-Ring	20	Y411500-20	Pump Cylinder
3	Y411500-03	Nylon Gasket	21	Y411500-21	Copper Gasket
4	Y411500-04	Oil Tank	22	Y411500-22	Handle Socket
5	Y411500-05	Oil Plug	23	Y411500-23	Linkage
6	Y411500-06	Square Seal	24	Y411500-24	Cotter Pin
7	Y411500-07	Extension Screw	25	Y411500-25	Axle
8	Y411500-08	Ram	26	Y411500-26	Handle Assembly
9	Y411500-09	Piston	27	Y411500-27	Oil Stopper
10	Y411500-10	U-cup Ring	28	Y411500-28	Release Valve
11	Y411500-11	O-Ring	29	Y411500-29	Square Seal
12	Y411500-12	Cylinder	30	Y411500-30	Base
13	Y411500-13	Square Seal	31	Y411500-31	Steel Ball
14	Y411500-14	Steel Ball	32	Y411500-32	Stud
15	Y411500-15	Dust Wiper	33	Y411500-33	Compression Spring
16	Y411500-16	Pump Plunger	34	Y411500-34	Pressure Screw
17	Y411500-17	Snap Ring	35	Y411500-35	O-Ring
18	Y411500-18	O Ring	36	Y411500-36	Safety Screw
			*	Y411500-RK	Repair Kit